






BASIC version double and single acting

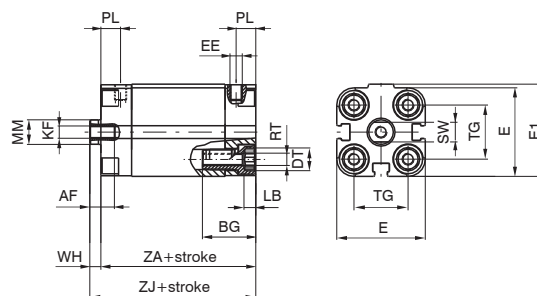



for bores from Ø12 to Ø25 use sensors codes
1580_., MHS_., MRS_ only

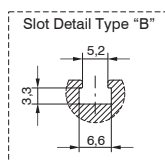


for bores from Ø32 to Ø50 use sensors codes
1500_., RS_., HS_ (slot A) 1580_., MHS_., MRS_ (slot B and slot A with adapter code 1380.01F)

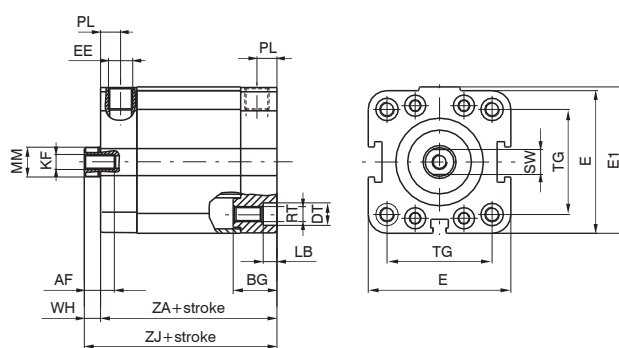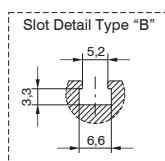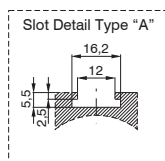


for bores from Ø63 to Ø100 use sensors codes
1500_., RS_., HS_ and 1580_., MHS_., MRS_ (with adapter code 1380.01F)

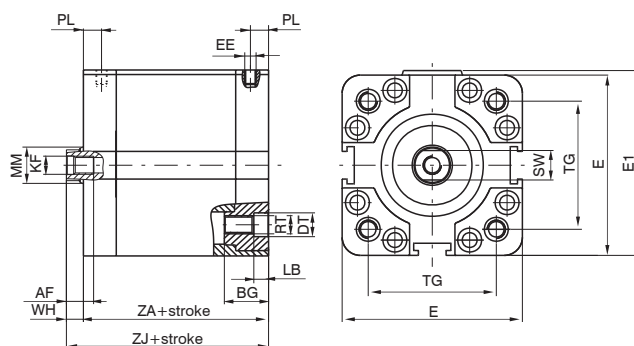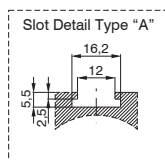

Through rod cylinder version, double and single acting

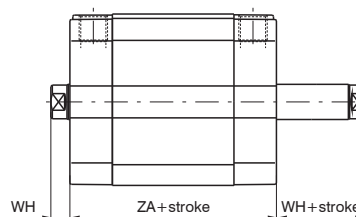

Tandem with opposed rods

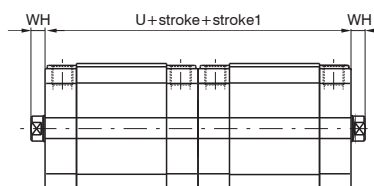

Tandem push with common rods

