Symbols

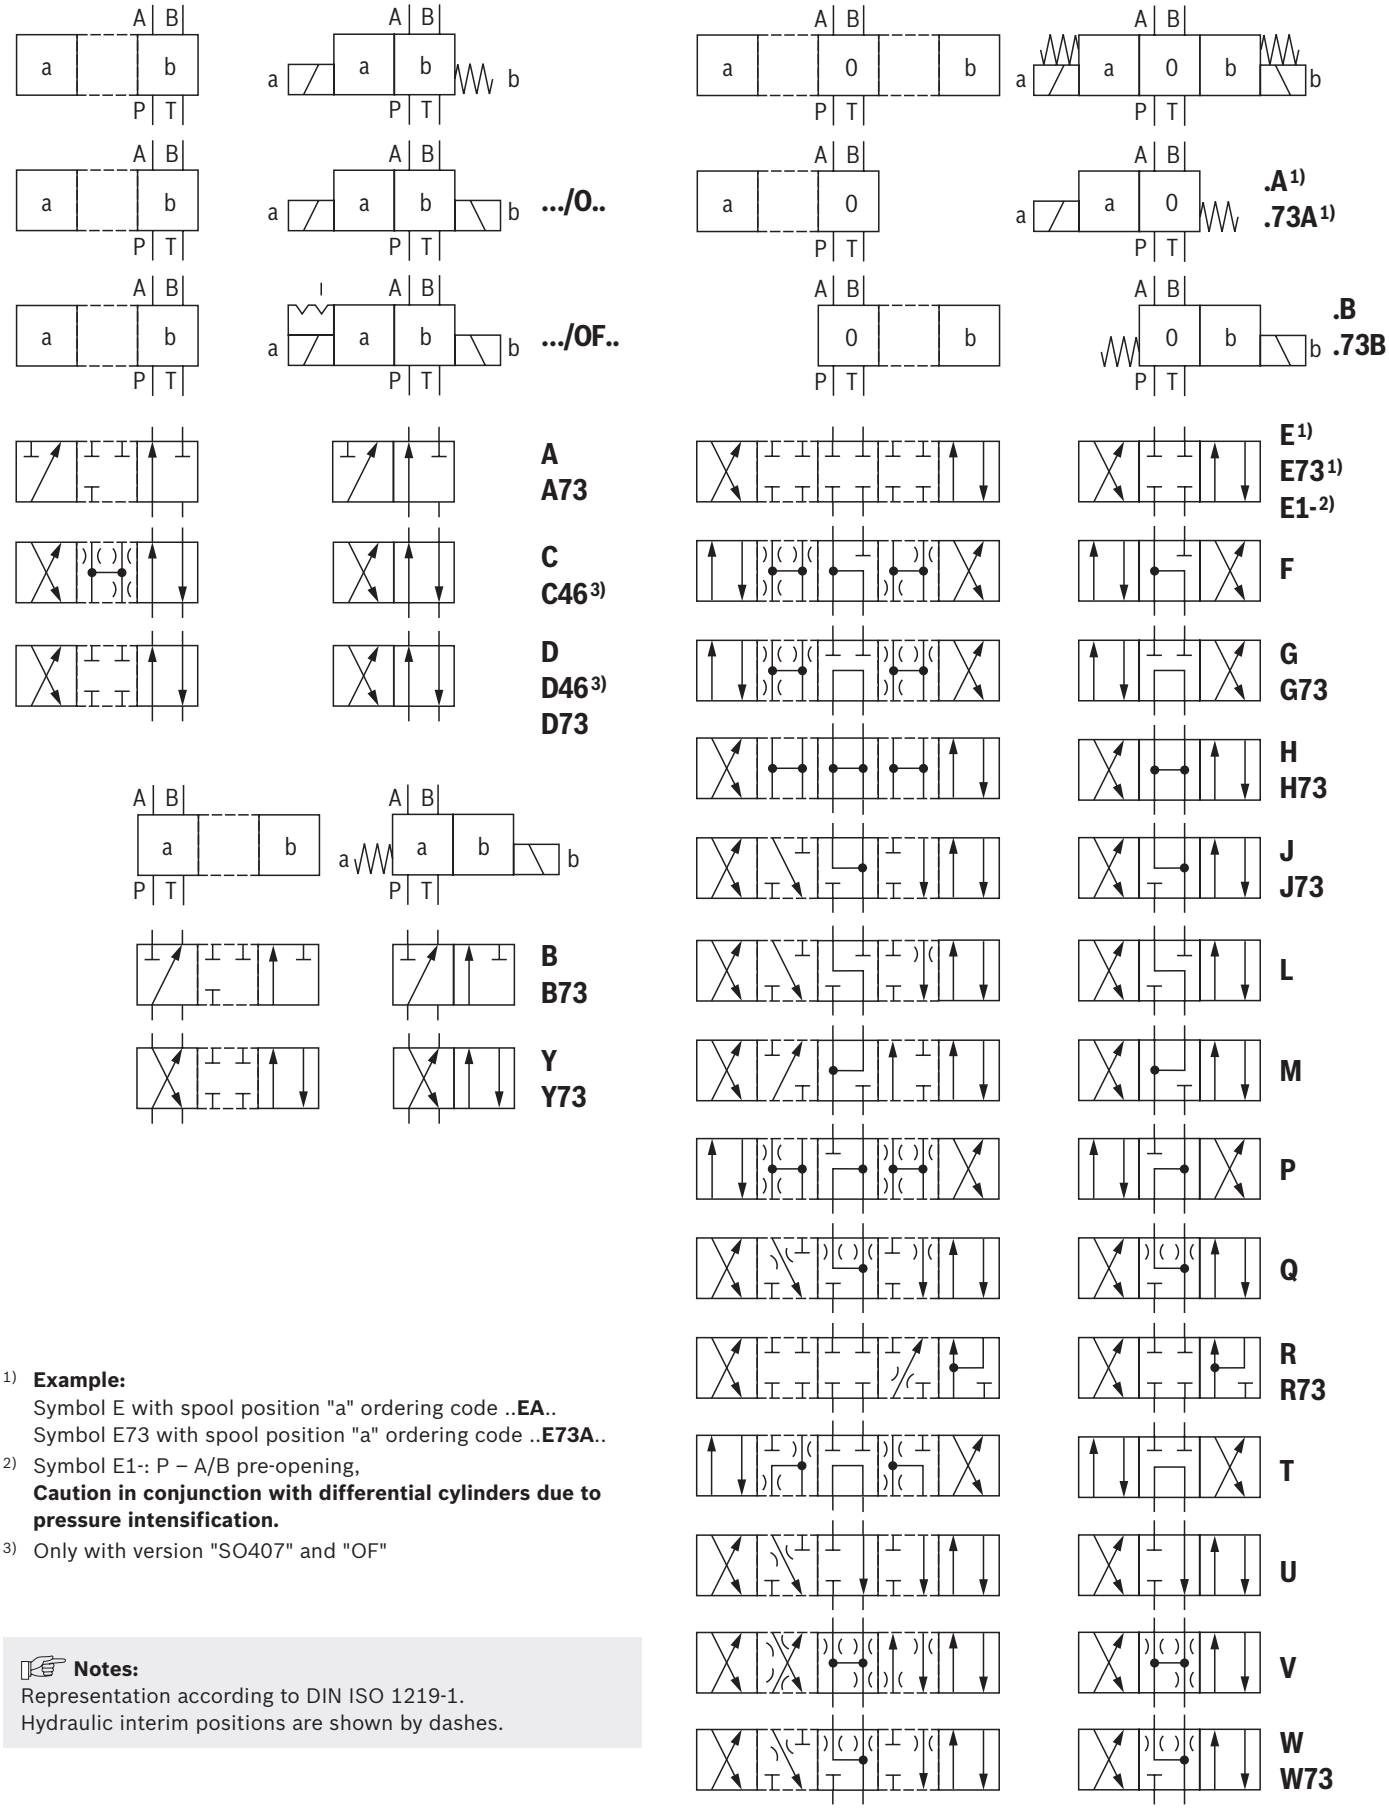

1) **Example:**
Symbol E with spool position "a" ordering code ..**EA**..
Symbol E73 with spool position "a" ordering code ..**E73A**..

2) Symbol E1-: P – A/B pre-opening,
Caution in conjunction with differential cylinders due to pressure intensification.

3) Only with version "SO407" and "OF"

☞ **Notes:**
Representation according to DIN ISO 1219-1.
Hydraulic interim positions are shown by dashes.